

PLUMBERS INSTALLATION INSTRUCTIONS

Medical / Hospital Basin

PLEASE READ CAREFULLY BEFORE INSTALLATION

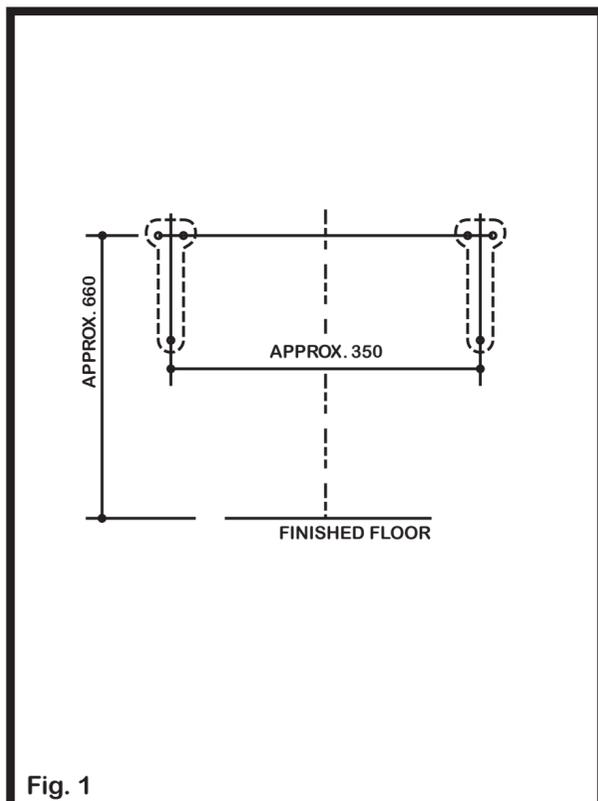
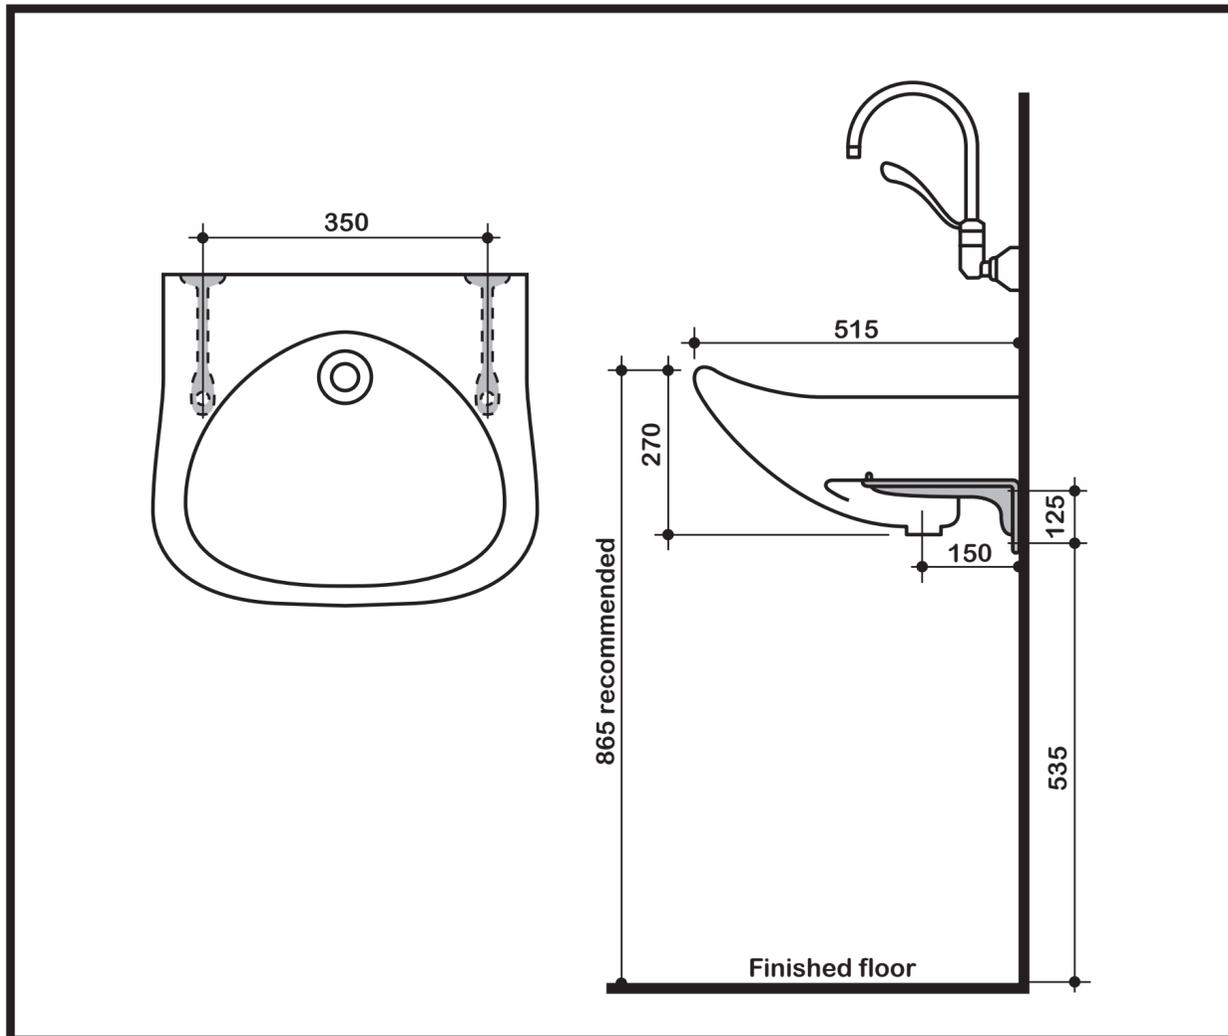


Fig. 1

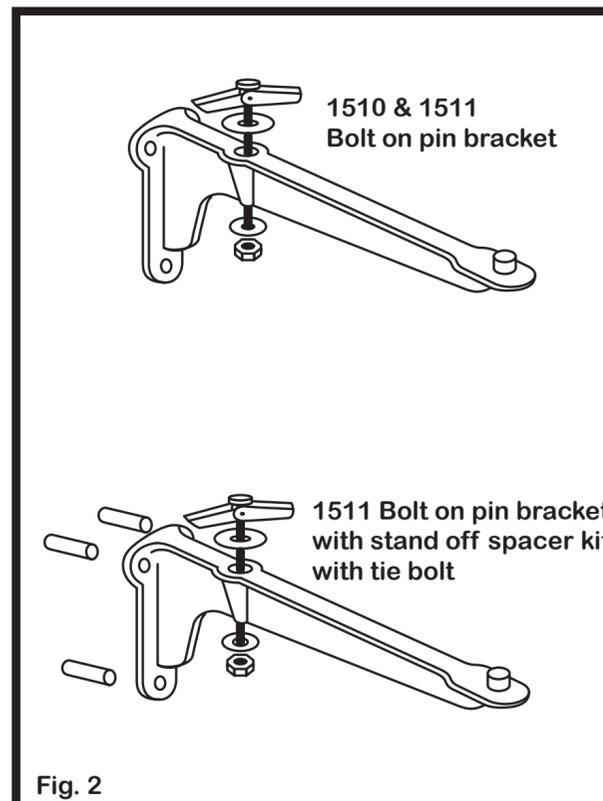


Fig. 2

MEDICAL / HOSPITAL BASIN

The basin should be installed using either a pair of 1510 uncoated alloy brackets, 1511 white enameled brackets or 1511 white enameled brackets with a stand off spacer kit with tie bolts.

ROUGHING IN:

- Prepare water inlet and outlet connections.
- For stud walls, position noggins in the frame to support the basin brackets.

ON WALL INSTALLATION

1. Mark the position of bracket fixing holes.

- Draw a horizontal line approximately 660mm from the finished floor level.
- Draw a vertical line on the wall to indicate the centre position of the basin.
- There are two blind slots on the underside of the basin into which the pins on the brackets locate and two holes into which the toggles locate. Check the distance between these holes (approximately 350mm) and draw two vertical lines on the wall to indicating their position and bracket centres, as detailed in Figure 1.

2. Drill bracket fixing holes.

- For stud walls lubricate the screw to ensure they can be easily inserted.
- For masonry wall suitable fasteners should be inserted into the fixing holes.

3. Fix the brackets flush with the wall for wall installations or 50mm off the wall using the spacer kit for stand off installations.

4. Fit tap set to the basin.

- Fittings should be fixed to the basin in line with normal plumbing practices.
- Care should be taken not to over-tighten as this may damage the basin.

5. Insert waste outlet.

- The outlet must be purchased separately. A standard 40mm should be used.
- Put a thin layer of suitable clear sealant around the underside of the outlet rim.
- Insert the outlet into the basin.
- Tighten the back nut firmly. Care should be taken not to over-tighten as this may damage the basin.

6. Mount the basin.

- Fit the toggle in reverse onto the bolts and fit rubber washers. Insert the bolts through the mounting holes in the brackets and fit washers and nuts. (as detailed in Figure 2.)
- Squeeze the toggles into the closed position and tighten the nuts until the toggle remains in the closed position.
- Lower the basin onto the brackets ensuring that the pins on the brackets locate into the slots and toggles locate into the mounting holes on the underside of the basin.
- Release the nuts until the toggles can be pushed through the mounting holes in the basin.
- Tighten the toggle bolts to secure the basin.

7. Connect the waste outlet.

- Connect an approved trap, eg. A 40mm polypropylene combination S&P compression joint waste trap.

8. Connect taps.

Installation in accordance with AS/NZS 3500.2