

## PLUMBERS INSTALLATION INSTRUCTIONS

### Installation (Fig.1)

Fit insert (1) to spline of spindle, then fit washer (2) & nut (3) to thread of spindle and tighten using an 8mm A/F spanner to secure insert (1). Align handle (4) as required then engage with insert (1) & tighten screw (5) with 2mm allen key (6).

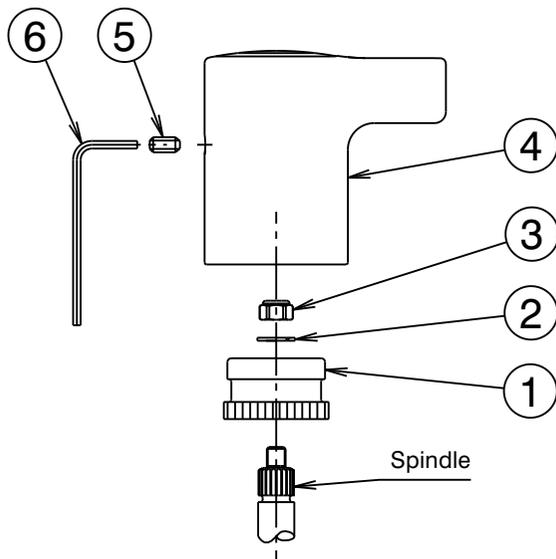


Fig. 1

### Changing the indicator (Fig.2)

- 1) Loosen screw (5) using a 2mm allen key (6) & remove handle (4). Remove screw (7) & washer (8) using a 3mm allen key. Push out retainer (10) & indicator (9).
- 2) Push in new indicator (9) followed by retainer (10). Assemble screw (7) with washer (8) then screw into the retainer (10) & tighten with the 3mm allen key. Align handle (4) as before then engage with insert (1) & tighten screw (5) with 2mm allen key (6).

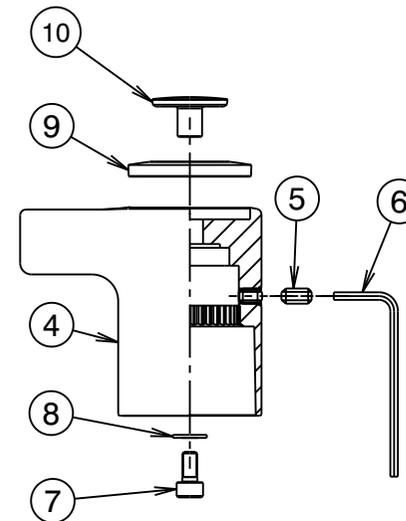


Fig. 2