

## HOSE INSTRUCTIONS STOP



### DO NOT INSTALL HOSE THIS WAY.

Outer hose will pinch the inner tube and lead to failure.

Such damage is easily recognised and not covered by warranty. Install correctly with a wall elbow (not included).

For commercial, industrial or parahealth use; ask your store consultant for correct shower selection.

## Cleaning Recommendations

Showers should only be cleaned with a mild liquid domestic cleaner, with soft soapsuds. After cleaning, rinse with clean water and polish with a clean soft cloth. Do not use any corrosive or abrasive cleaning agents containing acids or scouring agents.

Damage caused by any improper treatment is not covered by this warranty.

# Parahealth Rail Shower

## Installation Guide

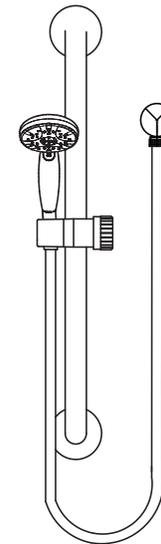


Illustration may not reflect actual product shape.

### IMPORTANT

Please read all of the instructions before installation



## Important Installation Considerations

Methven offers a complete range of stylish and affordable Home & Health® products, designed specifically for domestic care, nursing homes, aged care facilities and hospitals. When additional assistance is required, the Home & Health® range is available to help meet your needs.

To ensure compliance, please refer to AS/NZS 1428.1-2201 for specific installation requirements.

Please read all of the instructions before installation

1. **NOTE:** Some showers may not provide an effective shower when used with gravity fed heated water systems or where pressures are less than 150kPa at the outlet. Additionally showers with flow rates of less than 9L p/min may not allow the following to function correctly:
  - some instantaneous water heaters
  - some tempering valves
  - some thermostatic mixing valves
2. Some shower heads only operate correctly when hot and cold water supplies are both mains pressure and may not be suitable for some instantaneous hot water services.
3. When water pressure is in excess of 500kPa a pressure limiting device is required in accordance with AS/NZS 3500 1.12 recommendation; otherwise hose guarantee will be voided
4. Damage caused by hydrostatic testing is not covered by our warranty.

WARRANTY:- Refer to [www.methven.com](http://www.methven.com)

DOMESTIC INSTALLATIONS	LIFETIME
COMMERCIAL	5 YEARS

Commercial installations include Hotels, Motels, Factories, Schools, Hospitals, Restaurants and Aged Care facilities.

## Shower Installation Instructions

THE TOOLS THAT YOU MAY NEED: SCREWDRIVER AND DRILL.

1. To ensure compliance, please refer to AS/NZS 1428.1-2201 for specific installation requirements.
2. Unclip the flange cover to expose the fixing holes and mark the drilling hole positions on the wall using the rail as a template.
3. Drill both holes to suit fixing method (not provided).
4. Fix rail to wall.
5. Attach soap dish slider if provided (see below).
6. Clean the exposed thread and bind clockwise with thread sealing tape.
7. Fit the elbow to the thread. Tighten only by hand. (Ensure that elbow is vertical so that the hose hangs straight down).
8. Connect the hose and handset using the washers supplied. Hand-tighten only.

Fitting Slider and Soap Dish (where provided)

1. Remove chrome plated cap.
2. Remove rail holder.
3. Push slider over rail.
4. Replace holder and cap.
5. Tighten cap at desired height position.

### THE METHVEN GUARANTEE

The warranty statement shall apply to all tapware & showers supplied by Methven For more information visit [www.methven.com](http://www.methven.com)

THIS WARRANTY ISSUED BY: Methven Australia Pty Ltd, Melbourne Australia